

Century Corners

Installation Guide

The following guide pertains to the installation of an outside base corner protector for use in restaurants with high traffic corridors typically susceptible to impact and damage from carts and other abuses. This stainless steel product will eliminate the frequent need to repair quarry tile outside corners and replaces any current products now being used.

Recommended materials for applying this product include:

- 1) "GE Silicone II, 100% silicone sealant for aluminum & metal" where applications are bonding to cement board surfaces, or:
- 2) "Hydroment Ultra-Set" when bonding stainless to stainless. The Ultra-Set can be purchased in caulking cartridges from local distributors found on the "Distributor Locator" on the Bostik Findley website (www.bostikfindley-us.com). Additional information such as MSDS, application recommendations etc. are also available on this website.

Installation is recommended to be the day before installation of the quarry tile base. Base tile should be run from these corners out to eliminate small cuts adjacent to the corners. Grout in place as you would a standard base application and neatly caulk the tops of the stainless with the GE Silicone II (color: "aluminum").

Installation Steps:

1) Prepare adhesive.




2) Apply a liberal amount of adhesive on back side of corner protector.



3) Install in place of quarry tile corner. Caulk edges with silicone.



4) Secure corner protector in place with duct tape for 24 hours.

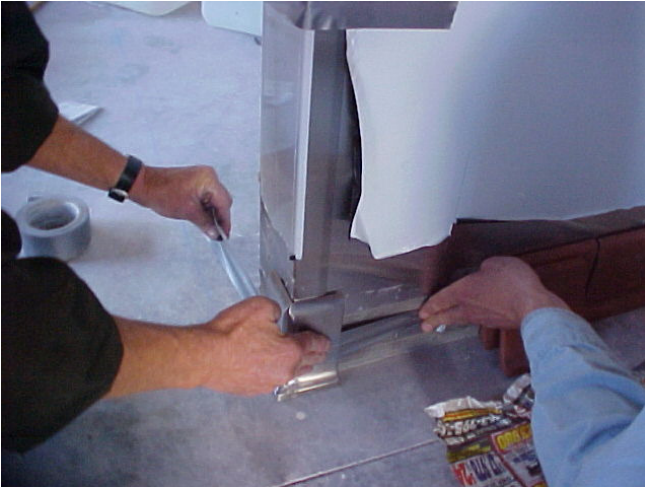

5) Fill voids at edges and top with silicone.

